



The H8 – 1 Digilock is a digital lock for hotel safes etc. The user set a four digit code and can use this to open the safe. Additionally there is provision for A back up or second code.

- ☐ **To Lock:** Press LOCK, turn handle.
- ☐ **To Open:** Press OPEN, enter the correct code, turn handle.
- ☐ (Note: new units have the code set to 0000).
- ☐ **To Set:** Press SET and menu number, then key in new setting.
- ☐ **To Set Code 2:** Press SET and 2 together and the display then shows 'Enter Code 2'. Key in present code, then the new code. (Note: new units have the code 2 to 0000).

Low Battery

Digilock H8 –1 is powered by a battery Which will require change after four years or Less if used frequently. The battery is usually Located in the safe door. Digilock will display The message Lo BAAt when the battery is low. To change the battery -

- Remove rear cover plate of the Safe door.
- Carefully disconnect battery From the PCB connector.
- Replace battery with same type And carefully replace connector

Note that the code and other setting will Not normally be lost when changing battery. However, the new time will need to be set.